


SSPD INSTALLATION OPTIONS – TOP VIEW

Option 1: Interior Mount (Standard) – Right Hinge Shown


Used for most installations in standard door frames, doorways or walled shower stalls

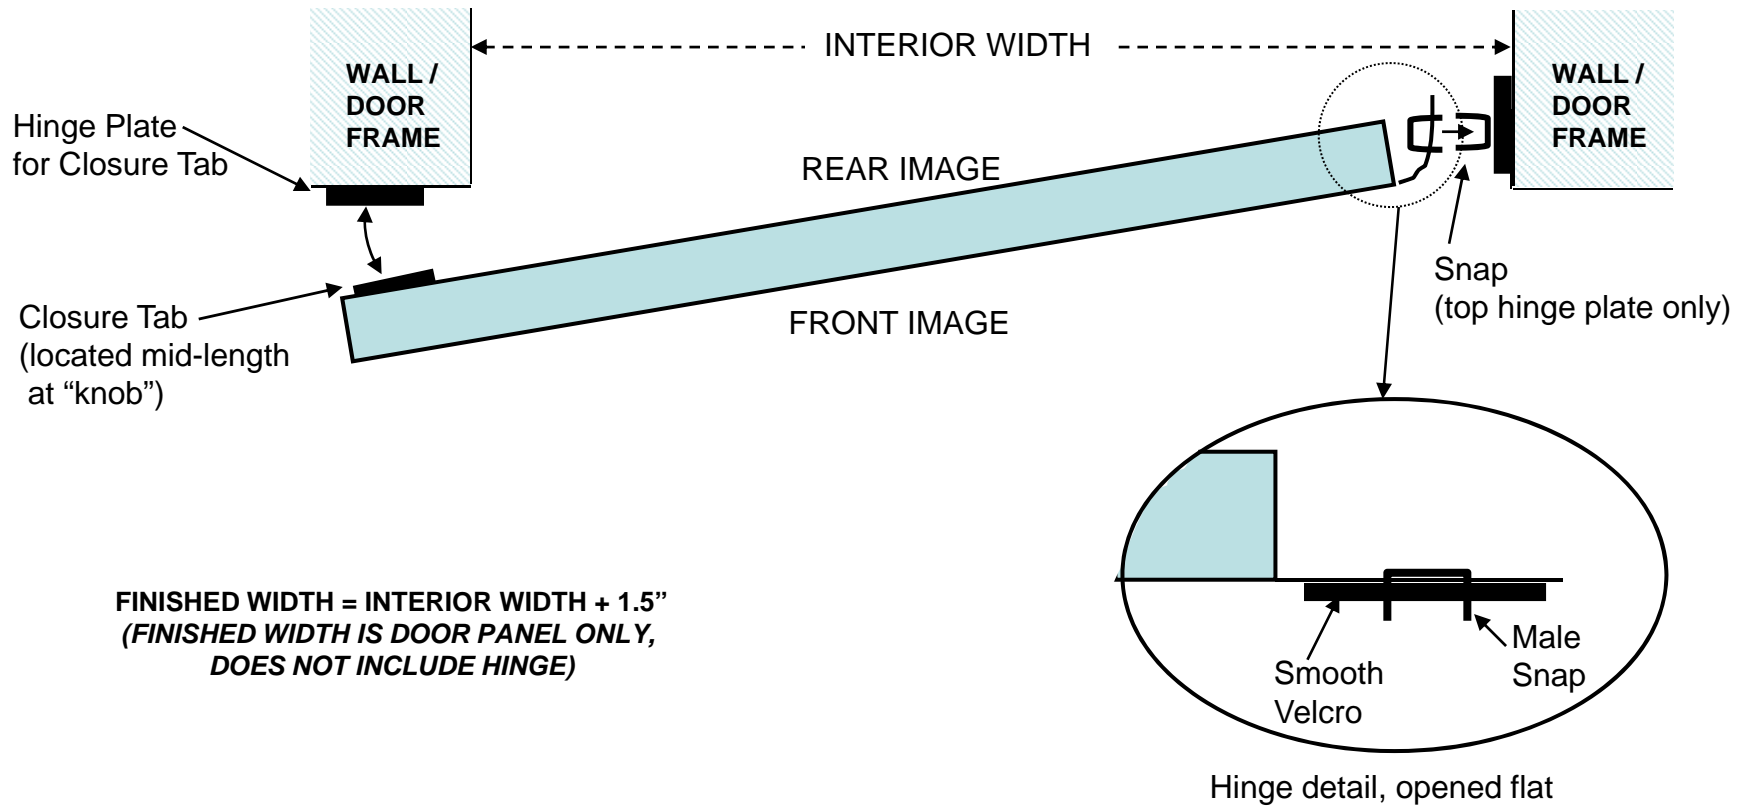

SSPD INSTALLATION OPTIONS – TOP VIEW

Option 2: Exterior Mount – Right Hinge Shown


Use this option when interior mount is not possible, such as certain bathroom partitions, shower stalls, or to allow a preferred location for hinge plate screws.

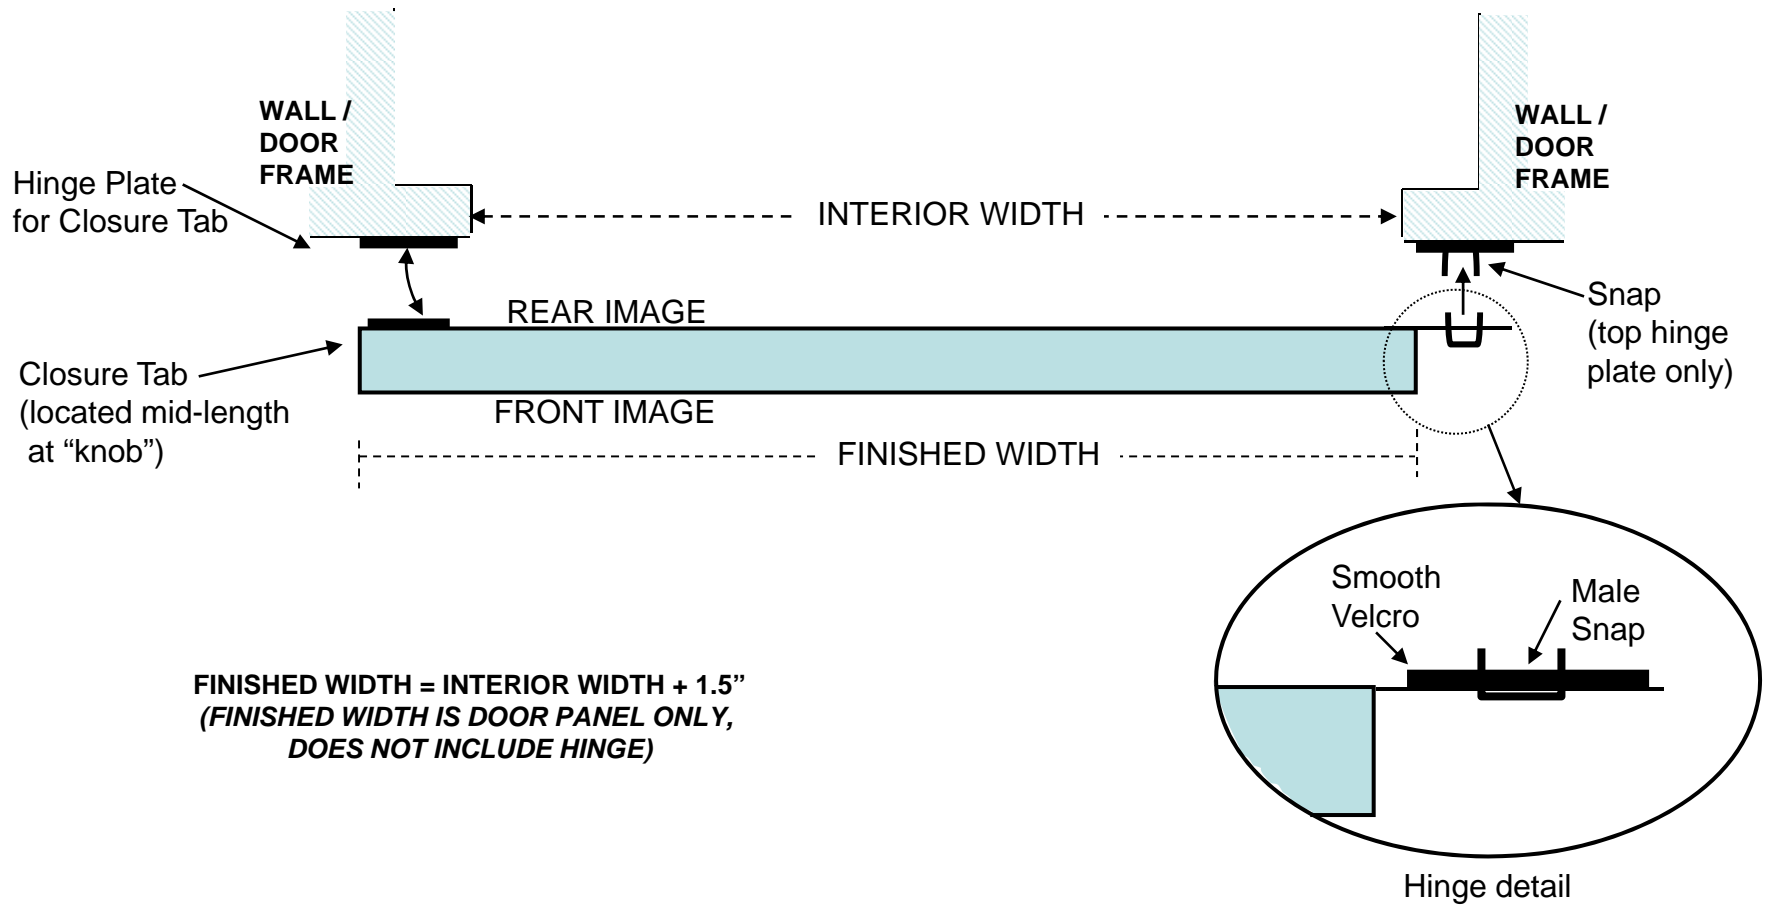

SSPD INSTALLATION OPTIONS – TOP VIEW


Option 3: Recessed – Right Hinge Shown

Use this option when there is no way to accommodate overlap for door stopping, such as shower basins recessed in walls.

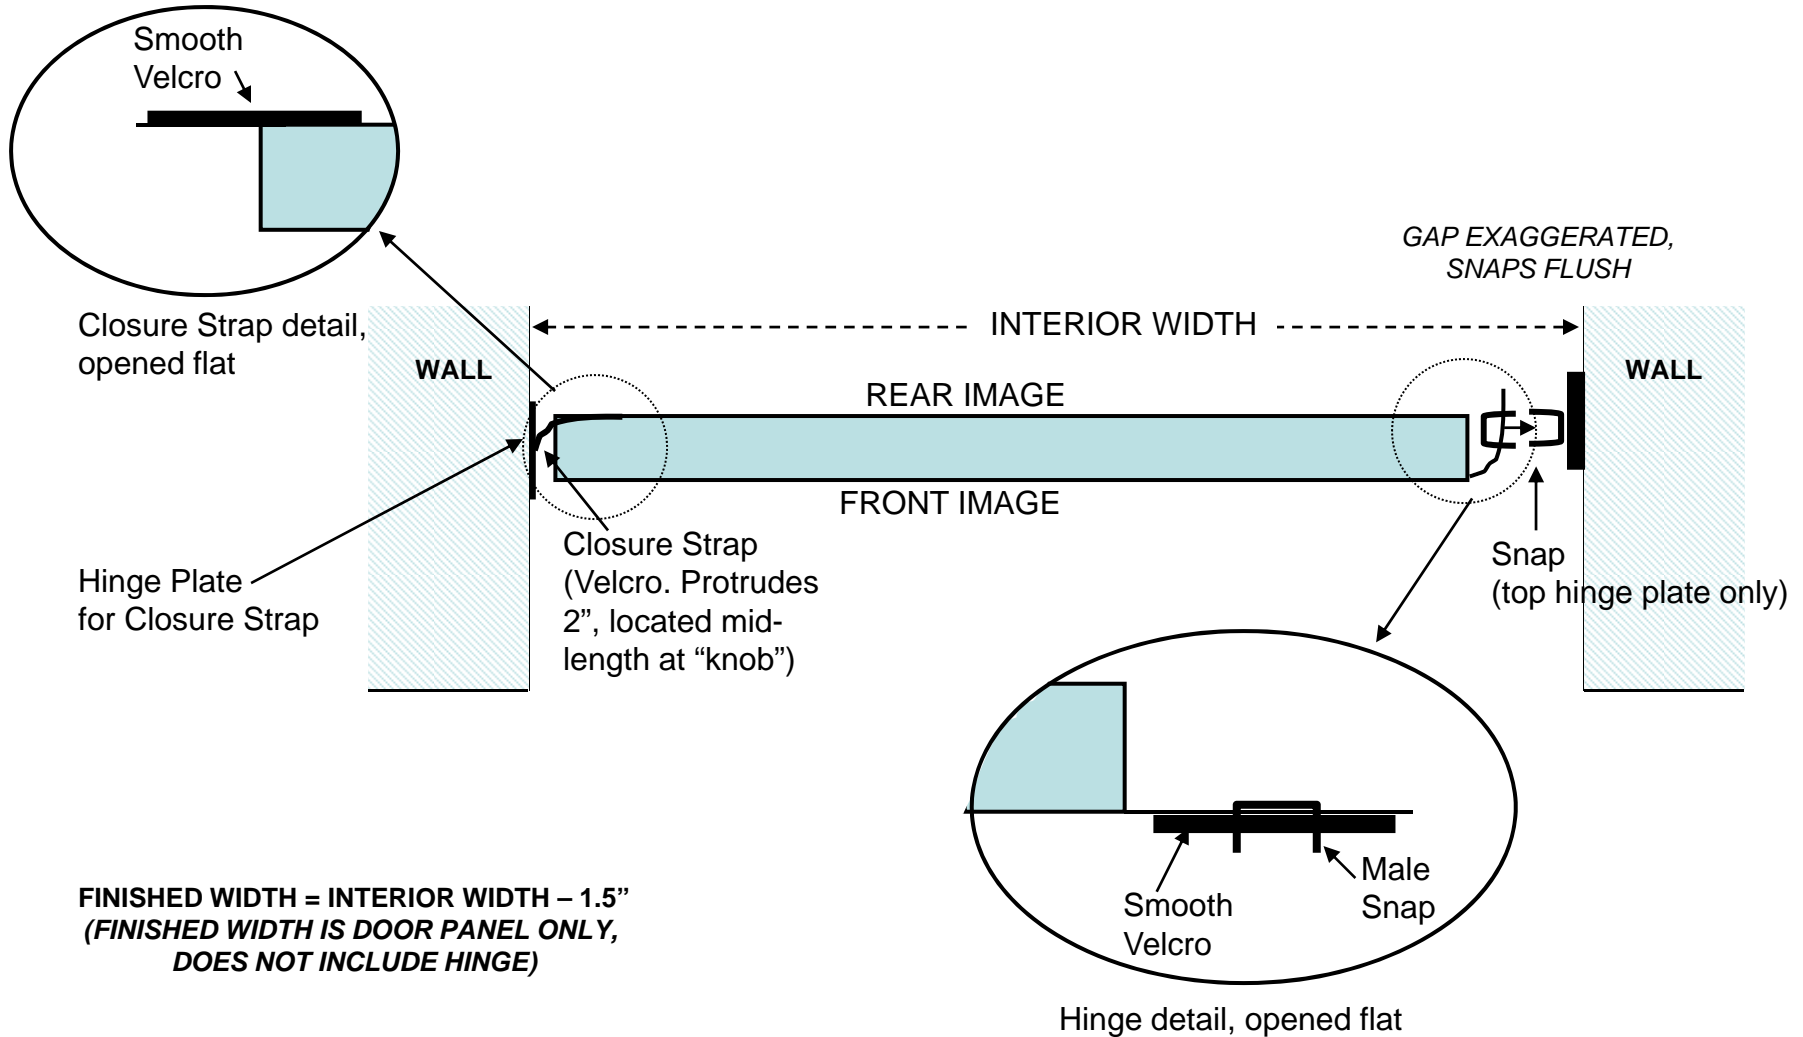

SSPD INSTALLATION OPTIONS – MANUFACTURING LAYOUT, TOP VIEW

1R: Interior Mount (Standard) – Right Hinge

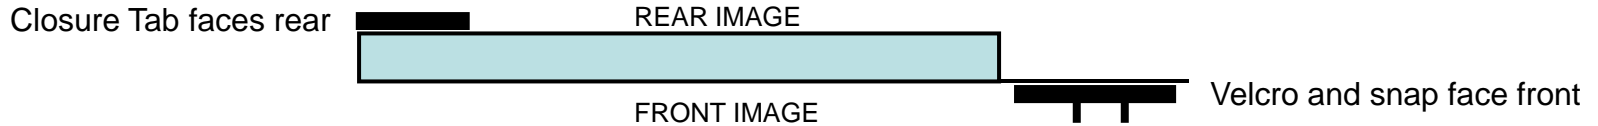


FINISHED WIDTH (NOT INCL. HINGE) = MEASURED INTERIOR WIDTH + 1.5"

1L: Interior Mount – Left Hinge




FINISHED WIDTH (NOT INCL. HINGE) = MEASURED INTERIOR WIDTH + 1.5"

2R: Exterior Mount – Right Hinge

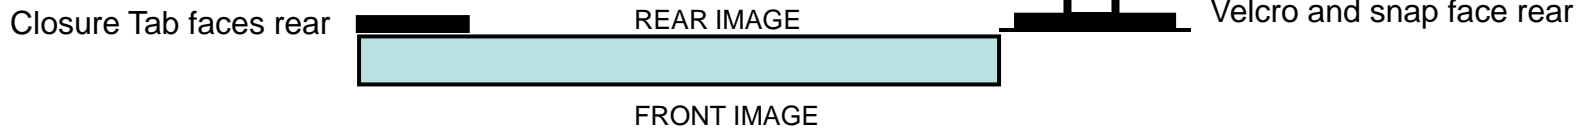

FINISHED WIDTH (NOT INCL. HINGE) = MEASURED INTERIOR WIDTH + 1.5"

2L: Exterior Mount – Left Hinge

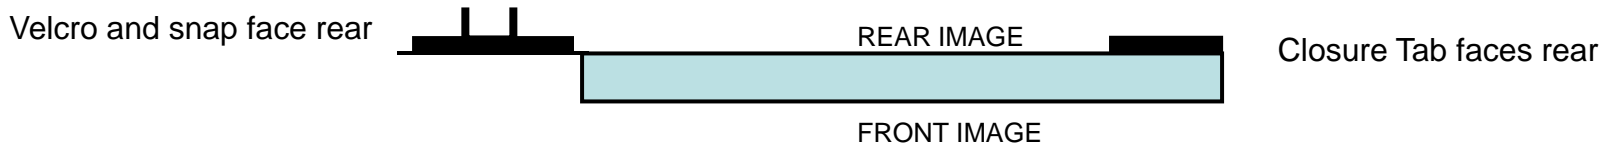


FINISHED WIDTH (NOT INCL. HINGE) = MEASURED INTERIOR WIDTH + 1.5"

SSPD INSTALLATION OPTIONS – MANUFACTURING LAYOUT, TOP VIEW

3R: Recessed – Right Hinge

Closure Strap – Velcro faces rear

REAR IMAGE



Velcro and snap face front

FRONT IMAGE

FINISHED WIDTH (NOT INCL. HINGE) = MEASURED INTERIOR WIDTH - 1.5"

3L: Recessed – Left Hinge

REAR IMAGE

Velcro and snap face front



Closure Strap – Velcro faces rear


FRONT IMAGE

FINISHED WIDTH (NOT INCL. HINGE) = MEASURED INTERIOR WIDTH - 1.5"

1S: Interior Mount Saloon

REAR IMAGE

Velcro and
snap face
front



“Soft” Closure Tab
faces front

FRONT IMAGE

“Hard” Closure Tab
faces rear

REAR IMAGE




Velcro and snap
face front

FRONT IMAGE

FINISHED WIDTH OF EACH PANEL (NOT INCL. HINGE) = (MEASURED INTERIOR WIDTH / 2) + 2"

SSPD INSTALLATION OPTIONS – MANUFACTURING LAYOUT

2S: Exterior Mount Saloon

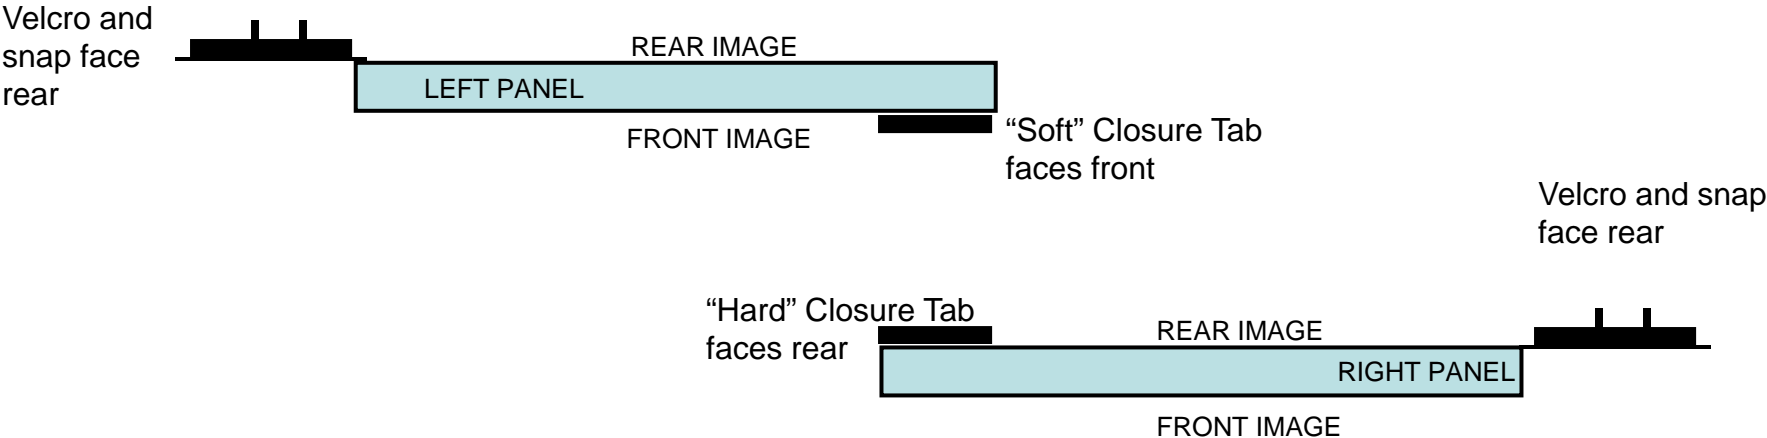

FINISHED WIDTH OF EACH PANEL (NOT INCL. HINGE) = (MEASURED INTERIOR WIDTH / 2) + 2"

Custom: Will provide drawing